



Dart Aerospace Ltd.
1270 Aberdeen St
Hawkesbury, ON
K6A 1K7
Canada

Tel (613) 632-5200
Fax 613 632-5246

SOLD ALONE

D3391-023

Job Sheet 184425



Part No: D3391-023

Job Qty: 1 ea

Part Name: Mid Tube Assembly



Part Weight: 0 lbs

Status: New

Priority: Medium

Job Created: 10/9/18

Job Tracking No:

Due Date: 11/12/18

Created By: Marie Lajeunesse

Type: SOLD

Description:

Note: DWG REV J SHEET 2 and 7 IPP A 05.10.20 New Issue KJ/EC IPP B IPP C 07.03.20 rev F dwg EC IPP D 07.03.28 re-format EC IPP E 07.10.31 ecn 1053P EC IPP Rev:F ECN 1056 07-11-13 DD verified by: EC IPP Rev:G 08-09-08 new process (ecn 08-510) DD verified by:EC IPP Rev:H 08-09-10 revH as per dwg DD verified by:EC IPP Rev: I 08-11-13 Removed steps per w/o, QC KJ verified by: ec IPP Rev:J add in seq 140 expire date &b# sikaflex DD 10.02.17 verified by:EC

Ship Via:

Bill of Materials

Job Routing

Op No	Operation	Qty	Start Date	Due Date	Standard		Workcenter/Supplier		Sign-off
					Setup hrs	Run Hrs	Workcenter / Supplier	Lead Time	
90	Start up Operation	1 Ea		11/12/18	0.00	0.00	Start Up Skidtubes-1		<i>DD</i>
100	Skidtubes	1 pcs		11/12/18	0.88	2.11	Skidtubes-4		<i>IT</i> <i>DAS</i>
110	QC	1 pcs		11/12/18	0.00	0.00	QC5		<i>38</i>
120	HandFinish	1 pcs		11/12/18	0.00	0.38	HandFinish1		<i>D.R 18/10/23</i>
130	QC	1 pcs		11/12/18	0.00	0.00	QC7-2		<i>MGS</i>
140	Skidtubes	1 pcs		11/12/18	0.00	2.11	Skidtubes-4		<i>J.Y</i>
150	QC	1 pcs		11/12/18	0.00	0.00	QC5		<i>BE</i>
160	Skidtubes	1 pcs		11/12/18	0.00	2.11	Skidtubes-4		<i>BE</i> <i>DAS</i>
170	QC	1 pcs		11/12/18	0.00	0.00	QC10		<i>38</i> <i>DAS</i>
180	QC	1 pcs		11/12/18	0.00	0.00	QC5		<i>9-89</i> <i>38</i>
185	HandFinish	1 pcs		11/12/18	0.00	0.38	HandFinish2		<i>D.R 18/10/23</i>
191	SprayPaint	1 pcs		11/12/18	0.00	0.91	Spray Paint		<i>NA</i>
192	Outsource	1 pcs		11/12/18			ATE003-VC		<i>QC 18-10-25</i>
193	Packaging	1 pcs		11/12/18	0.00	0.00	Packaging2		<i>QC 31 2018</i>
200	QC	1 pcs		11/12/18	0.00	0.00	QC14		<i>12/12-3-31</i>
230	HandFinish	1 pcs		11/12/18	0.00	0.38	HandFinish4		<i>12/12-10/23</i>
240	QC	1 pcs		11/12/18	0.00	0.00	QC5		<i>NOV 01 2018</i> <i>68</i>
250	Packaging	1 pcs		11/12/18	0.00	0.00	Packaging3-1		<i>BB</i> <i>69</i> <i>NOV 05 2018</i>
260	QC21-SA	1 Ea		11/12/18	0.00	0.00	QC21		<i>9-89</i> <i>21</i> <i>NOV 05 2018</i>

Part Op 100 - 1-Cut tube to finish length as per Dwg D3391 2-Drill pilot holes using DT8796 (Do not drill "B" holes) and drill only 1
Descriptions: fwd saddle hole on one side only as per Dwg D3391 3-Open aft saddles and GHW holes to Ø0.4375" except for fwd saddle
holes 4-Remove .030" from Fwd indexing Ridge as per Dwg D3391 5-Remove indexing ridge on Fwd & Aft end of
skidtube as per Dwg D3391 6-Deburr, scibe batch # on aft end. 7- Locate D3391-021 in D3391-023 at 9.00" (see view
F-F) 8- Transfer drill one fwd saddle hole only to .188" dia, transfer drill all remaining fwd saddle holes using DT 8149
locating from previously drill .188" dia hole, using t-pins and clicos to ensure perfect allingment, open up previously tranfer
drilled pilot holes in D3391-023/-021 using drill press. ON FIRST SIDE ONLY drill out 2nd and forth fwd saddles holes to
0.500" as per ON 2ND SIDE ONLY ream out 2nd and forth saddle hole to 0.499". D3391-021
BATCH: _____ 9- Drill #30 pilot holes using wearplate Jig DT8217 Identify Ø0.375" holes with paint marker,
DO NOT DRILL HOLES #3-19-20 FROM FWD END OF JIG Locating from two fwd wearplate holes in D3391-023
drill remaining 6 wearplte holes in D3391-021 using DT8937 10- Open wearplate holes of D3391-023 assembly detail
section Q-Q to Ø0.375" (10 holes) as per Dwg D3391 Open wearplate holes of D3391-023 assembly detail section H-H to

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date : _____	Step #: _____	QTY Effective : _____		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition			Completed By
					Lead hand / Supervisor Approval Verification
					QC / QA Coordinator Approval
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐
OTHER : _____					

Ø0.297" (20 holes) as per Dwg D3391 Deburr and blow out all chips from inside tube, scribe

140 - 1-Open float bag holes as per dwg 2-C'sink float bag holes as per dwg 3- Prepare tube for welding 4-Bond web in place as per Dwg D3391 & QSI 015. Adhere for 12 hours) A/R Sikaflex exp: 1138443 batch#: March 6th 2018

NOTE: ENSURE WEB IS INSERTED IN AFT END OF TUBE

160 - 1-Weld crossbolt spacer as per dwg D3391 & QSI 004 2-grind weld flush A/R 138673

185 - Re-alodine

191 - PRIME AS PER DWG AND QSI005 4.2.1.3.3 PRIMER BATCH: _____ PAINT AS PER DWG AND QSI005 4.2.2.4 PAINT: _____

230 - 1-Install Inserts as per Dwg

192-outsource: PO041455

Job BOM

Part / Item	Component Name	Quantity	Operation	Container
D2500-1-100	Skidtube Extrusion	1 Ea (1 ea)	90-Start up Operation	<u>B163253</u>
D3389-1	Web	1 Ea (1 ea)	140-Skidtubes	<u>5117102</u>
D3681-1	Spacer	5 Ea (5 ea)	160-Skidtubes	<u>5103210</u>
ALS4-1032-130	Rivnut	20 Ea (20 ea)	230-HandFinish	<u>5067274</u>
D3591-1	Bushing	2 Ea (2 ea)	230-HandFinish	<u>5122431</u>

Job Allocations

Operation	Component Part	Required	Inventory	Allocated
90-Start up Operation	D2500-1-100	1	32	0
140-Skidtubes	D3389-1	1	11	0
160-Skidtubes	D3681-1	5	257	0
230-HandFinish	ALS4-1032-130	20	12,131	0
	D3591-1	2	11	0

Part Specifications

DART
AEROSPACE

1270 Aberdeen Street
Hawkesbury, ON K6A 1K7
CANADA
TEL.: 1 813 632-5200
Email: sales@dartaero.com
www.dartaerospace.com

be found.

Container No: **S119062**



Part: **D3391-023**

Job No: **134425**

Serial No/Batch: **S119062**

Revision: **J**

Inspector:

Exp Date:

Instructions: **Various STC's**

Date: **10/17/18**

Plex 10/9/18 1:11 PM Dart.lajeunesse.marie

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width:100%;"> <tr> <td style="width:15%;">Skid-tube ☐</td> <td style="width:15%;">Cross tube ☐</td> <td style="width:15%;">Water Jet ☐</td> <td style="width:15%;">Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>				Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																		
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																		
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																		
Large Fab ☐	Composite ☐	Supplier ☐																			


Date :	Step #:	QTY Effective :	MRB (QSI042) Approval
--------	---------	-----------------	-----------------------

Description Work Order Deviation	Disposition	Completed By
		Lead hand / Supervisor Approval Verification
		QC / QA Coordinator Approval

Root Cause			FAULT CATEGORY		
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____			
Misidentified ☐	Past Due ☐				

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER

NO. 184425 ML5
10-10-09

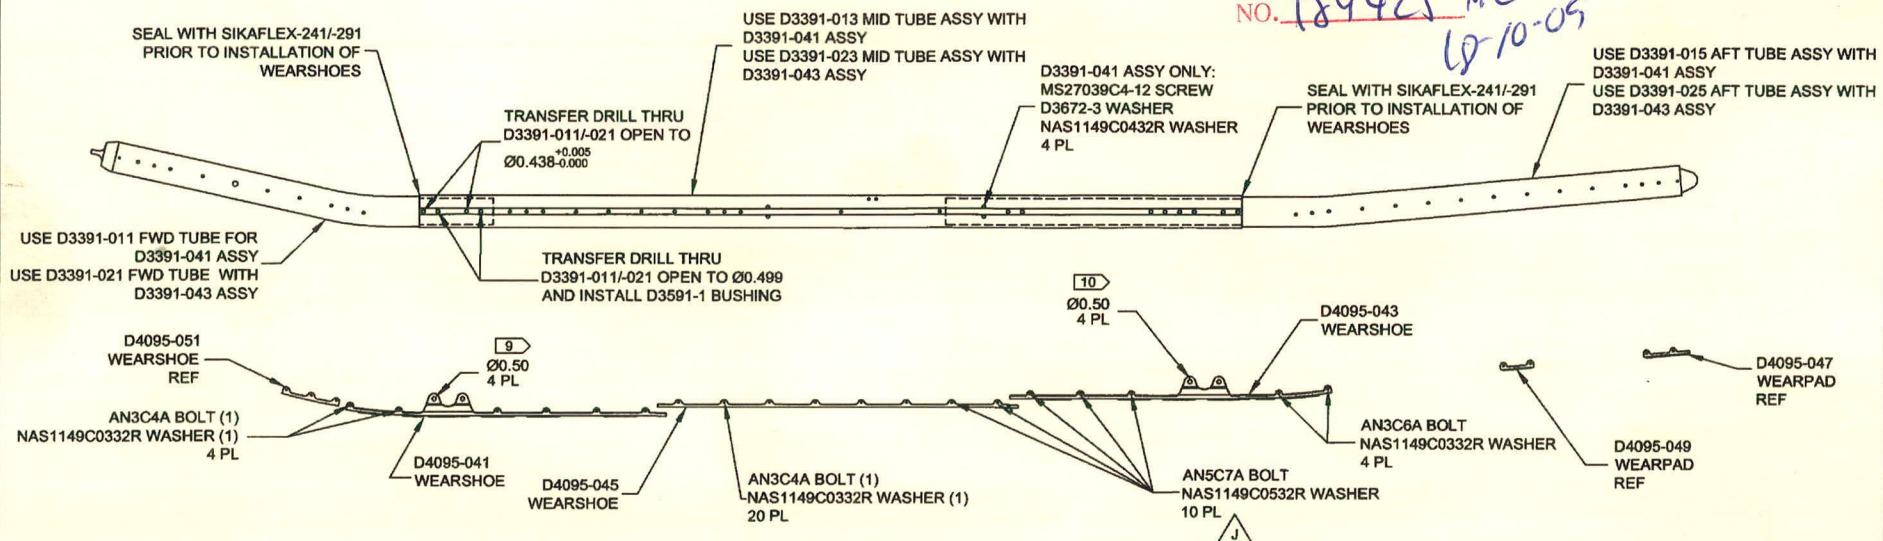

D3391-041/-043 ASSY



NOTES:

- 1) MATERIAL: N/A
- 2) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1
PRIME PER DART QSI 005 4.2.1.3.3
PAINT WHITE PER DART QSI 005 4.2.2.4
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 6) IDENTIFICATION: IDENTIFY PER DART QSI 044 6.6
- 7) WEIGHT: N/A
- 8) COAT ALL EXPOSED FASTENERS WITH LPS "LPS PROCYON"
- 9) FIT D4095-041 TO SKIDTUBE WITH D2571 AND D2572 SADDLES INSTALLED WITH THE APPROPRIATE HARDWARE AND SPACERS IN FORWARD AND AFT HOLES AND TRANSFER DRILL $\varnothing 0.50$ HOLES FROM SADDLE TO D4095-041
- 10) FIT D4095-043 TO SKIDTUBE WITH D2571 AND D2572 SADDLES INSTALLED WITH THE APPROPRIATE HARDWARE AND SPACERS IN FORWARD AND AFT HOLES AND TRANSFER DRILL $\varnothing 0.50$ HOLES FROM SADDLE TO D4095-043

RELEASED
2016-04-28

DESIGN	PH	DART AEROSPACE USA, INC	
DRAWN	ML	EUGENE, OR	
CHECKED	CP	DRAWING NO.	REV. J
MFG. APPR.	DP	D3391	SHEET 2 OF 11
APPROVED	DP	TITLE	SCALE
DE APPR.	DP	412 FLOAT SKIDTUBE	NTS
DATE	16.01.14	COPYRIGHT © 2005 BY DART AEROSPACE USA, INC	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.			

